

## Unico Due phono board settings

To adjust phono board settings, change jumpers positions as indicated.

**WARNING! UNPLUG MAINS CABLE AND REMOVE ANY RING OR BRACELET BEFORE PUTTING YOUR HANDS INSIDE THE AMPLIFIER.**

Jumper **JP111L** and **JP111R** are used to set the input impedance :

jumper between pin 1 and 2 = 47 Kohm

jumper between pin 2 and 3 = 100 ohm

Jumper **JP113L** and **JP113R** are used to set MM or MC mode :

jumper between pin 1 and 2 = MM mode

jumper between pin 2 and 3 = MC mode (high gain)

Jumper **JP112L** and **J112R** are used to set the gain:

jumper between pin 1 and 2 = standard gain

jumper between pin 2 and 3 = +10dB gain (high gain)

